


Service Manual

3 Way Speaker system

SB-C350

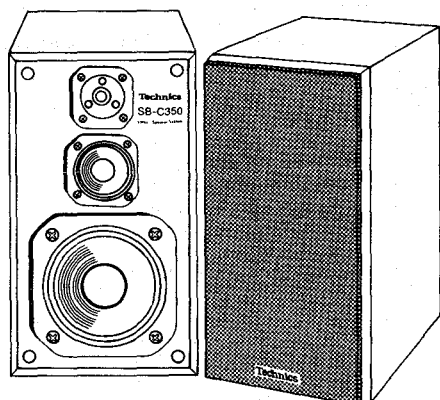

Color

(K) Black Type

Color	Area
(K)	[EG] ... F.R. Germany.

■ SPECIFICATIONS

Type
Speakers

3 way 3-speaker system
Woofer: 20 cm corn type
Midrange: 10 cm corn type
Tweeter: 2.5 cm dome type

Impedance
Input Power

6 ohms
140W, Music
70 W, DIN

Output Sound Pressure Level

88 dB/W (1.0 m)

Crossover Frequency

1,000 Hz, 4,500 Hz

Frequency Range

36 Hz~33 kHz (-16 dB)

44 Hz~30 kHz (-10 dB)

Dimensions (W×H×D)


280×495×208 mm

Weight

7.4 kg

(Specifications are subject to change without notice for further improvement.)

■ EXPLODED VIEW

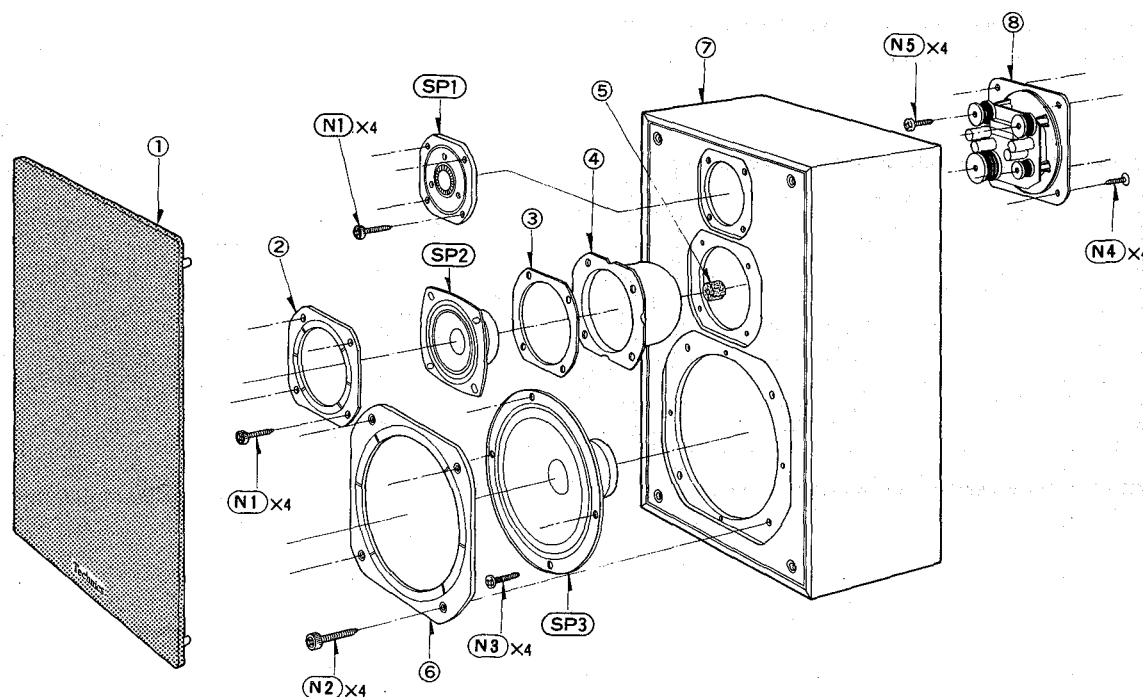

Technics

Matsushita Electric Trading Co., Ltd.
P.O. Box 288, Central Osaka Japan

REPLACEMENT PARTS LIST

- Notes:**
1. Part numbers are indicated on most mechanical parts. Please use this part number for parts orders.
 2. The parenthesized numbers in the columns of description stand for the quantity per set.


Ref. No.	Part. No.	Part Name & Description
SPEAKERS		
SP1	SASS3PH06-T	Tweeter
SP2	SASS10PM01-T	Midrange
SP3	SASS20PL04-T	Woofer
COILS		
L1	SLCSA182JZ	1.8 mH
L2	SLCSJ122JZ	1.2 mH
L3	SLCSJ122JZ	1.2 mH
L4	SLCSA221KZ	0.22 mH
CAPACITORS		
C1	ECEA50Y47K	50V, 47 μ F
C2	ECEA50Y6R8K	50V, 6.8 μ F
C3	ECEA50Y6R8K	50V, 6.8 μ F
C4	ECEA50Y5R6K	50V, 5.6 μ F
RESISTORS		
R1	ERF5ZXK2R2	5W, 2.2 Ω

3. Bracketed indications in Ref. No. columns specify the area. Parts without these indications can be used for all areas.


Ref. No.	Part. No.	Part Name & Description
CABINET PARTS		
1	SYBS261-1	Grill
2	SGHS1074	Panel Midrange
3	SHP56011	Spacer, Tweeter
4	SUVS9-1	Cover, Midrange
5	SHRS9071	Bushing
6	SGHS1073	Panel, Woofer
7	SKAS2631W	Cabinet Ass'y
8	SJFBC350-KE	Terminal Board Ass'y
SCREWS		
N1	SNES9006FG	Tweeter, Midrange
N2	SNES9003-2FG	Panel, Woofer
N3	XTNSS43+25FN	Woofer
N4	XMS31+D16FZ	Terminal Board
N5	XTB4+35B	Terminal Ass'y
ACCESSORIES		
A1	SQFS449	Instruction Book
A2	SWXS218	Speaker Cord
PACKING PARTS		
P1	SPG5743-2	Carton Box
P2	SPSS1066	Pad, Corner
P3	SPS4766-1	Pad, Bottom
P4	SPS4764	Pad, Center
P5	SPS4765-1	Pad, Upper
P6	SPHS6029	Millar Mat
P7	SPHS4X150A03	Sheet

SCHEMATIC DIAGRAM

(This schematic diagram may be modified at any time with the development of new technology.)

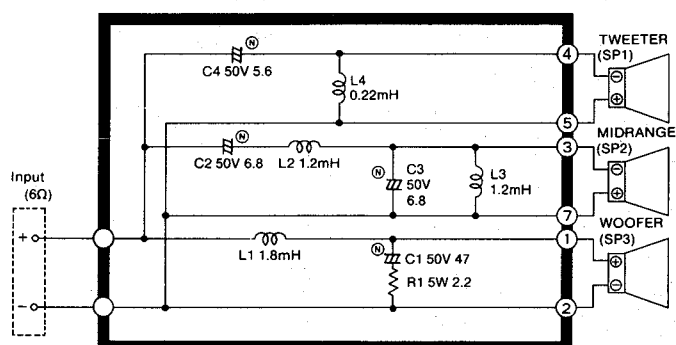

PACKING

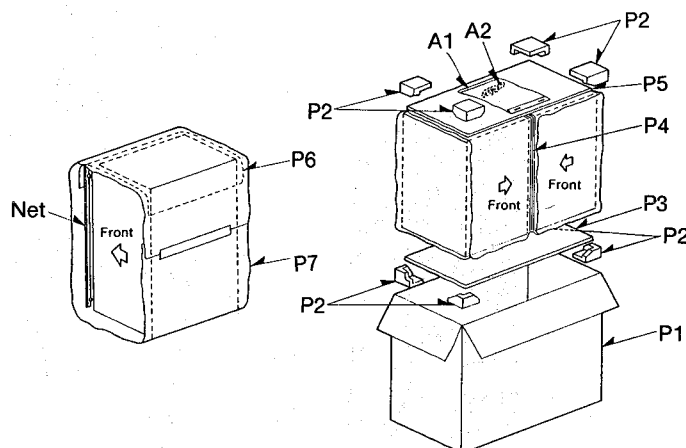

Service Manual

3 Way Speaker System

SB-C350

Color

(M) Walnut Type
(K) Black Type

Area

Color	Area
(K) (M)	(EH) Holland.

Note:


This supplement manual has been issued to inform you that the service manual for above model contains some incorrect information. Please kindly correct your service manual as follows.

CORRECTION


■ SCHEMATIC DIAGRAM

(This schematic diagram may be modified at any time with the development of new technology.)

INCORRECT

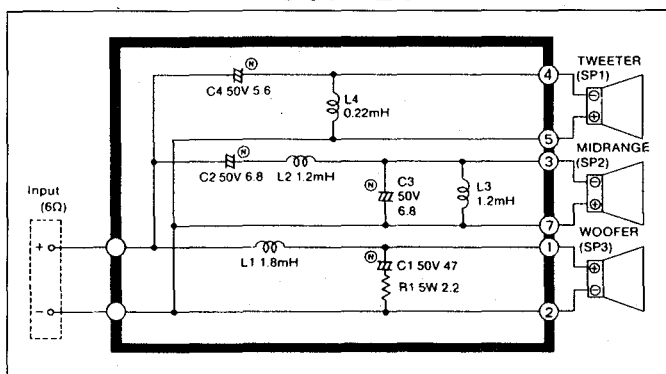

CORRECT

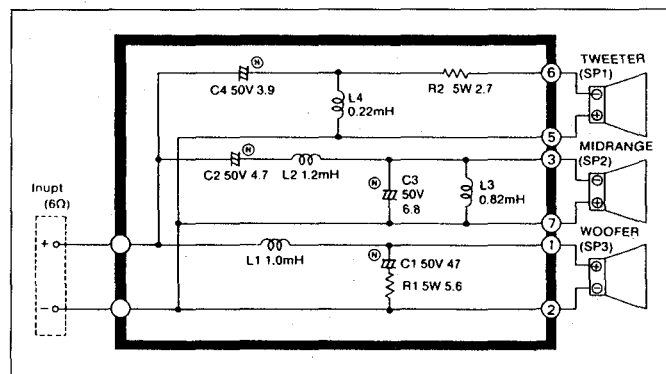

■ REPLACEMENT PARTS LIST

Ref. No.	Change of Part No.		Part Name & Description	Remarks
	INCORRECT	CORRECT		
COILS				
L1	SLCSA182JE	SLCSA102JE	COIL, 1.0 mH	Change
L3	SLCSJ122JE	SLCSA821JE	COIL, 0.82 mH	Change
CAPACITORS				
C2	ECEA50Y6R8K	ECEA50Y4R7K	ELECTROLYTIC, 50 V, 4.7 μ F	Change
C4	ECEA50Y5R6K	ECEA50Y3R9K	ELECTROLYTIC, 50 V, 3.9 μ F	Change
RESISTORS				
R1	ERF5ZXK2R2	ERF5ZXK5R6	CEMENT, 5 W, 5.6 Ω	Change
R2	_____	ERF5ZXK2R7	CEMENT, 5 W, 2.7 Ω	Addition
ACCESSORY				
A1	SQFS472	SQFS438	INSTRUCTION MANUAL	Change
PACKING PART				
P1	SPG5743-2	SPG6270	CARTON BOX	Change

Technics

Matsushita Electric Trading Co., Ltd.
P.O. Box 288, Central Osaka Japan

Printed in Japan
S880300420YY